



Delivery condition

1. Remove the cover cap.

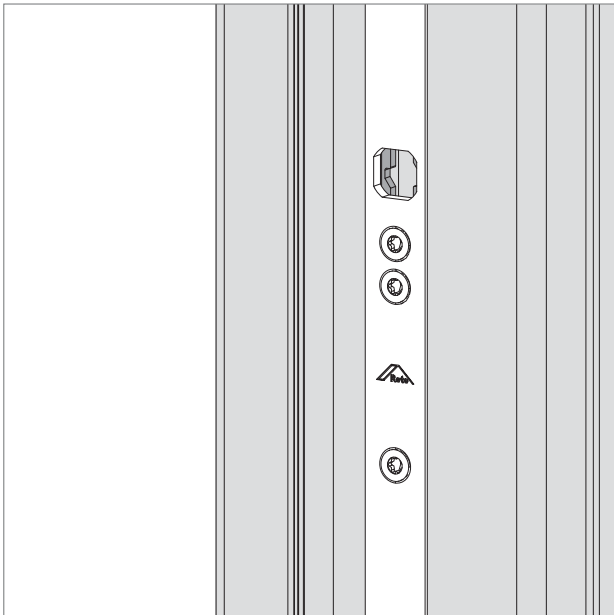

Installation

1. Unlock the lock.
2. Press the handle downwards until the hole location for the changeover switch installation will be released.

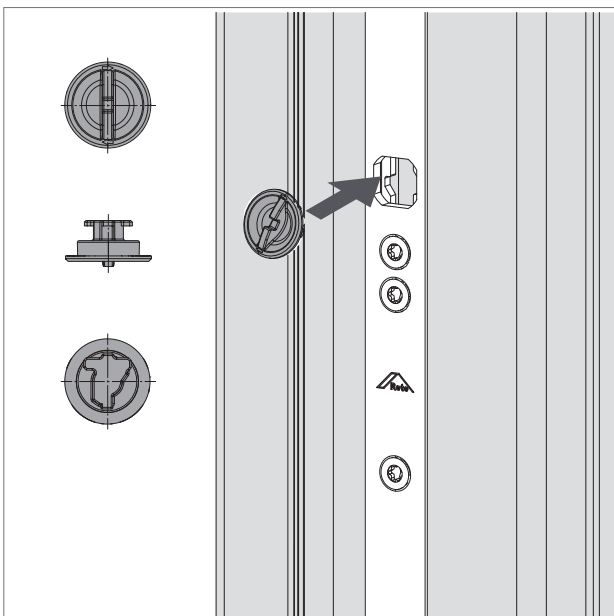

3. Hold down the handle. Clip in the changeover switch rotated to the left approx. 25°.
4. Turn the changeover switch to vertical position.




NOTE!

Make sure that the switch is in night position (vertical rib).

5. Release the handle.



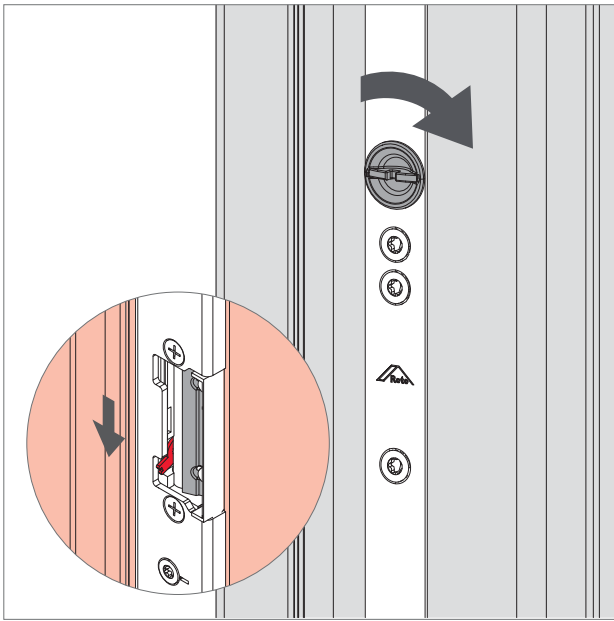

Operation

Activating day-time unlocking

1. Press down the handle fully.
2. Hold down the handle. Turn the changeover switch to the right (clockwise) into horizontal position.

The supplied magnetic chip serves as an aid for switching.

For storage, attach the magnetic chip to the faceplate.

3. Release the handle.



NOTE!


Activate the E-opener on the frame side.

The additional locks remain retracted. Now the door can be opened without pressing the handle and without key. Precondition for this is that the E-opener in the frame component is set to day-time unlocking (see detail illustration).



NOTE!

If day-time unlocking is activated, the VdS certificate expires.

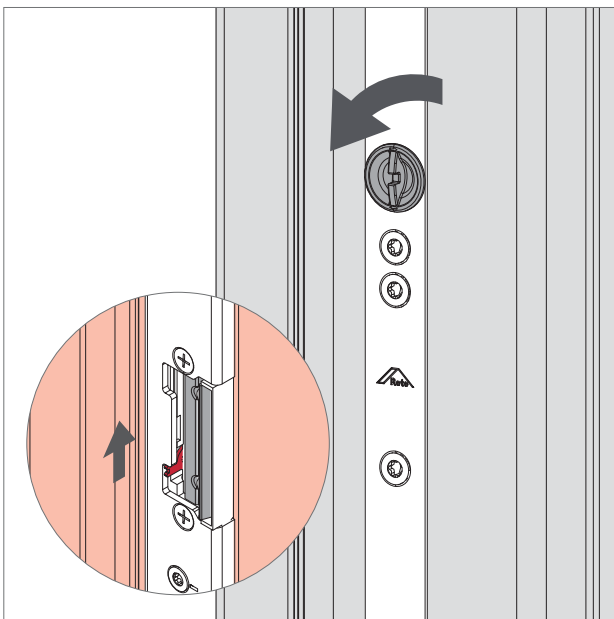

Deactivating day-time unlocking

1. Press down the handle fully.
2. Hold down the handle. Turn the changeover switch to the left (counterclockwise) into vertical position.
3. Release the handle.



NOTE!

Deactivate the E-opener on the frame side.

The additional locks run out. Now the door can only be opened by pressing the handle or with the key. (Set the E-opener in the frame component to night operation mode (see detail illustration)).

Roto Frank AG Window and Door Technology

Wilhelm-Frank-Platz 1
70771 Leinfelden-Echterdingen
Germany

Phone +49 711 7598 0
Fax +49 711 7598 253

info@roto-frank.com
www.roto-frank.com

Subject to change

Door ■ Roto Safe C ■ Day-time unlocking Tandeo

IMO_420_EN_v1 ■ June 2016 ■ 2 / 2

